


Foldback® Bifold Doors

Cavity Construction Installation Details

TOP HUNG FOLDBACK® BIFOLD WINDOW & DOOR SYSTEMS

FOLDBACK® BIFOLD - HEAD DETAIL

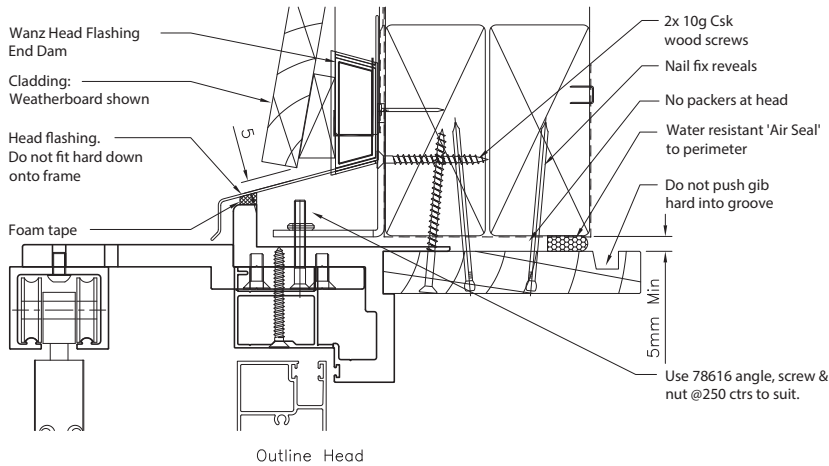


Foldback™ Installation Tips.

Use Bifold fixing bracket 78616 or 78619 or solid blocking off the lintel frame where appropriate to suit the cladding. For brick veneer and EIFS this will definitely be required. The Foldback™ needs to be installed with the jamb's outer face within 15mm of the outer cladding face, so on Brick Veneer it will be out by the outer face of the brick. This must be explained as it will appear different to the other units in the house/lot.

The head must be fixed through the outer fixings. A second row of inner fixings through the reveal must be used as well.

The head can be solid packed at the ends directly above the jambs but nowhere else as per standard bifolds to allow for later adjustment, if required.

FOLDBACK® BIFOLD - SILL DETAIL

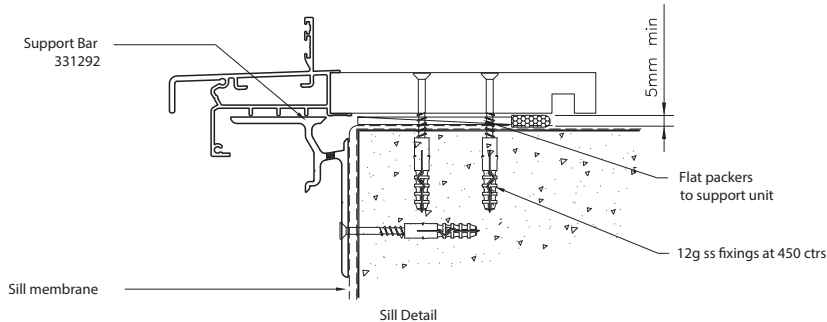

FOLDBACK® BIFOLD - JAMB DETAIL

